



Available For: Glock, Beretta, Jericho, CZ, Sig Sauer, Springfield, Bersa, Bul, H&K And many more models...




DOT-SIGHTS

Variety of red-dot & reflex sights is available.



FFS/FRS

FRS: Low profile rear flip-up sight.
FFS: Low profile front flip-up sight.
Can be use as back-up or primary sights.

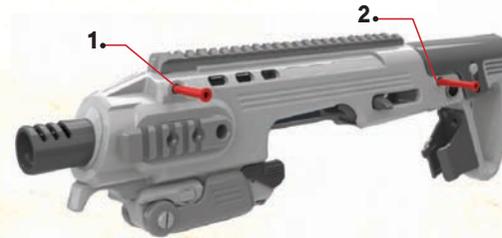

Step 1

Pull the two locking pins (#1 & #2) out by pushing them thru the RONI. The pins have detents to prevent them from being pulled out completely.

Step 2

Pull the butt stock to full extension by pressing the button on the rear side of the stock (#3).


PLS1/34

Slim shape & low profile polymer Picatinny light/laser mount.




TC1

Viking Pro Tactical Flashlight
1 Watt Luxeon® LED.
Water & Shock Resistant.

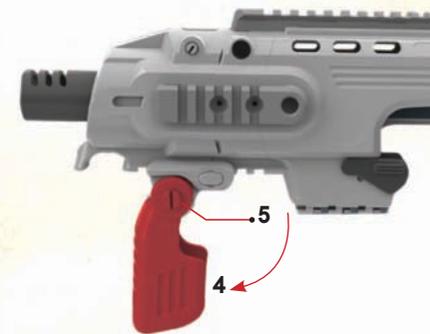

Step 3

Open forearm-grip to a vertical position by pushing release button (#5) and swinging grip down into vertical position (#4).

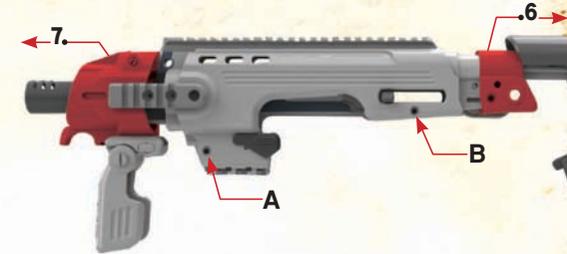

Step 4

Lay the RONI down on its side - muzzle points left. Slide parts #6 & #7 to fully extended position.

Some RONI models includes locking screws (A & B). In such case, make sure to unlock them prior to installation. Note: the screws are not mandatory & you can un-screw them all the way out - it will not affect the tightness.

PBSS

Push button heavy duty sling swivel.



OPS/SQA

OPS One point heavy duty sling - uses #PBSS.
SQA Two point heavy duty sling - uses #PBSS.



RONI CASE


The case can take all RONI models plus accessories.



RBC

Pivoting brass-catcher.
RBCG1: For RONI G1 - Glock Models.
RBCF: For all other RONI Models.



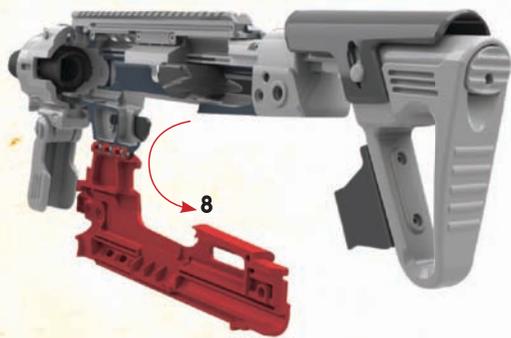


Step 5

Open the body on its bottom hinge (#8).



Step 6

MAKE SURE - PISTOL UNLOADED & EMPTY CHAMBER!
Place the polymer slide attachment (#12) over the rear sight - as shown above.

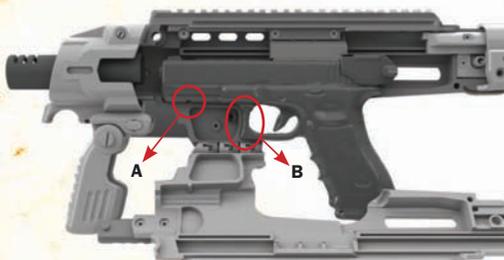

Step 7


Place pistol into position - make sure it is laying flat & the pistol's trigger guard located well against the RONI frame (#B). If your pistol has an under barrel rail slot, it must be located well against the male rail bar on the RONI (#A). In order for the RONI to close properly, make sure the pistol and slide attachment are locked into position.



Step 8


Bottom view

Changing between short/long frames (such as Glock 19/17 or Jericho PSL/PL), unscrew #10. Then, adjust #11 to the accurate position, so you can re-screw it securely. To be sure that the fitting is correct, you **must** insure step 9.

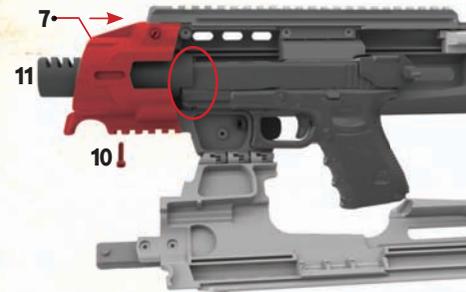

Step 9

Push part #7 up against the slide. As pictured above, make sure that the muzzle (#11) covers the pistol's slide & make sure the screw is well tightened (#10).

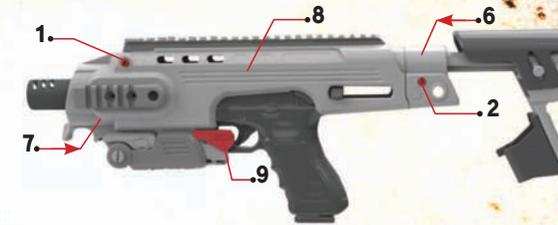

Step 10

IMPORTANT: If your RONI model includes it, make sure that both safety-catches (#9) are locked at the same position. Close the body (#8) and push parts #6 & #7 back together into locking position, then completely reinsert the locking pins (#1 & #2).

RONI PARTS



- 1 Front locking pin
- 2 Rear locking pin
- 3 Stock extension button
- 4 Forward grip
- 5 Position selection button
- 6 Rear housing
- 7 Front housing

- 8 Pistol housing (body)
- 9 Safety catch for the trigger's guard
- 10 Muzzle's positions screw (hidden)
- 11 Muzzle hose
- 12 Charging handle adaptor
- 13 Extra magazine holder
- 14 Adjustable cheek-rest screw
- 15 Grip removal button